



DV-1820

# MULTIMEDIA SYSTEM




# Owners Manual

## Installation

This unit is fitted with ISO connectors which allow direct fit into many European cars. Adaptors are widely available to convert the ISO connector to vehicle specific factory loom to allow direct plug and play connections. Mount the unit securely into the dash

## Connections

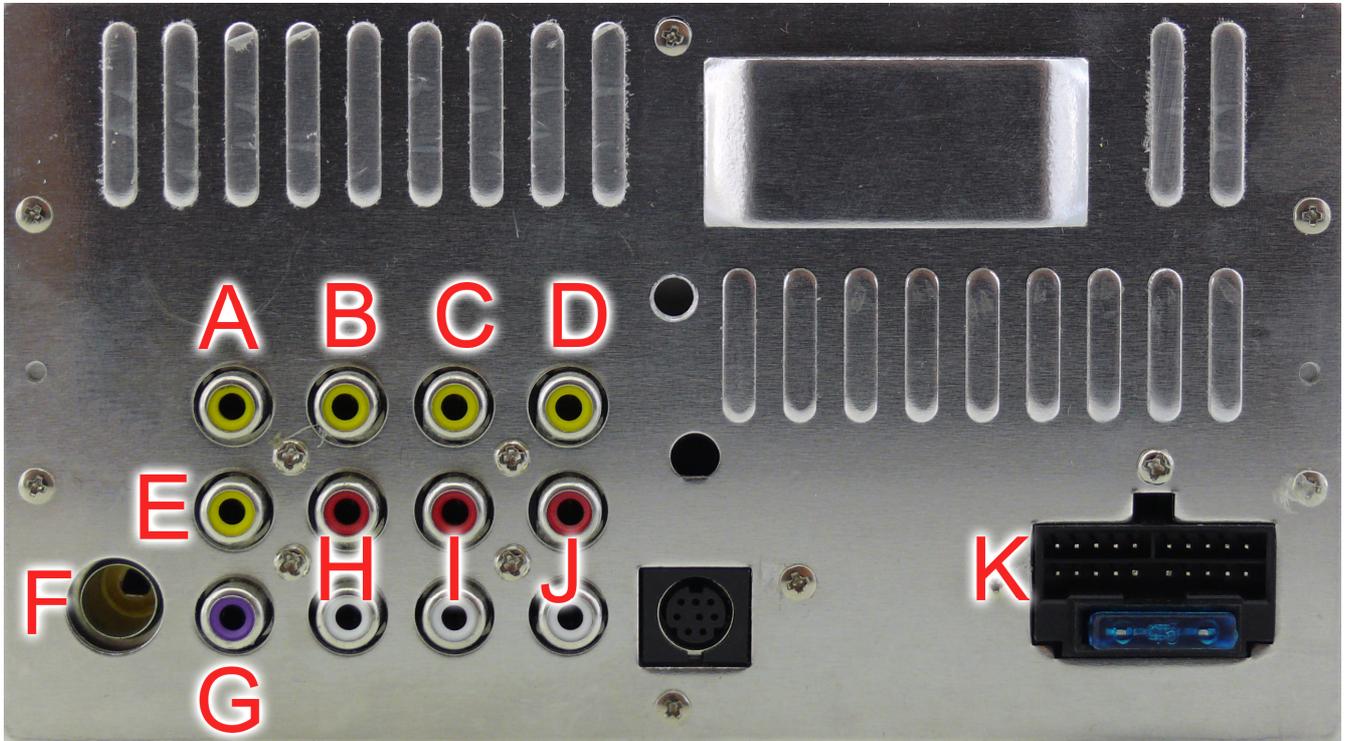

- |          |                          |          |  |
|----------|--------------------------|----------|--|
| <b>A</b> | Rear camera video input  | <b>F</b> | Radio antenna                            |
| <b>B</b> | Aux video input          | <b>G</b> | Subwoofer output                         |
| <b>C</b> | Video output 1           | <b>H</b> | Aux audio input left (white) right (red) |
| <b>D</b> | Video output 2           | <b>I</b> | Rear audio out left (white) right (red)  |
| <b>E</b> | Front camera video input | <b>J</b> | Front audio out left (white) right (red) |

**K** Main connector

Colour	Function	Colour	Function
Black	Ground	White	Front left speaker +
Yellow	+12V constant input	White/Blk	Front left speaker -
Red	+12V ACC switched input	Grey	Front right speaker +
Blue	Amp remote output	Grey/Blk	Front right speaker -
Blue - ant	Automatic antenna output	Green	Rear left speaker +
Pink - Brake	Handbrake input (Ground to enable)	Green/Blk	Rear left speaker -
Pink - Back	Reverse signal trigger 12V input	Purple	Rear right speaker +
Orange - Key1	Steering wheel control input 1	Purple/Blk	Rear right speaker -
Orange - Key2	Steering wheel control input 2		
Orange - ill	Illumination input		

## Front Panel



- A Reset** In the event you need to factory reset the unit, press in with a pin etc
- B Eject** Press to eject CD/DVD Disc
- C Menu** Press to get to the main menu icon screen as pictured above
- D Micro SD Port** Insert media, a files list will automatically load and be displayed
- E Power / Volume Control / mute**  
 To turn the unit on, *press* the volume control briefly  
 To turn the unit off, *press* and hold the volume control for 1 second  
*Turn* to adjust volume  
 When unit is on, *press briefly* to mute the speakers, *press again* briefly to resume sound
- F USB Port** Insert media, a files list will automatically load and be displayed
- G Aux In** Front Auxiliary input 3.5mm stereo
- H Radio Icon** Press to turn on AM/FM tuner
- I USB Icon** Press to switch source to USB
- J Screen off** Press to display blank screen, touch anywhere on panel to resume
- K Disk Icon** Press to start/resume CD/DVD playback
- L SD Icon** Press to start/resume/list files on the micro SD card
- M Menu Pg 1** Press to display Page 1 of main menu screen
- N Clock Icon** Displays current time. Press to make time full screen
- O AV IN Icon** Press to display auxiliary AV input
- P F Cam Icon** Press to display front camera image (if fitted)
- Q Menu Pg 2** Press to display Page 2 of main menu screen
- R Audio Icon** Press to display and modify audio settings
- S iPod Icon** Not on this model
- T Wallpaper Icon** Press to change screen background wallpaper

## Front Panel Continued

Main menu page 2 Press X to get to this page




- U TCH Cali** *Press Icon to enter touch screen calibration mode  
If touch screen is not responding correctly to screen presses, then answer yes to the prompt "Is screen calibration?" Press the orange + signs as they move around to each blue circle for 1 cycle. Then press MEN button on front panel to exit this mode*
- V Option Icon** *To change system settings press this icon and the system settings screen will be displayed (see next page for more information)*
- W Menu Page 1** *Press to display page 1 of main menu*
- X Menu Page 2** *Press to display page 2 of main menu*

## System Settings



- A Time/Date** Press to adjust the time and date properties  
Press + and - buttons to set the time and date  
Press MEN button to exit setup
- B Language** Press to adjust desired language. Default is English  
Press MEN button to exit setup
- C Steering Wheel Control function**  
*This unit has the ability to learn commands from the steering wheel controls if your vehicle is fitted with them*  
**See next page**
- D Park Brake** This head unit is fitted with a handbrake input wire, which if connected to the handbrake (ground to enable video playback), will disable any video media playing on the screen while driving.  
This can be disabled by the (P) icon  
*Off* will ignore handbrake input  
*On* will obey handbrake input and disable video to the screen
- E Startup Pic** Press this to change the startup wallpaper when unit is switched on  
Press the icon and enter pin number (default 0000) Then *press* enter  
There are 2 pages of icons to choose from (use arrow at top left of screen to get to next page)  
Press MEN button to exit once new image is selected
- F Other** Factory set functions  
This menu is for factory settings and is generally not required as there is no Bluetooth / GPS / TV / RGB /or Digi TV on this model  
The "Change pul 10K" is factory default to ON
- G Beep** This makes any key or screen icon press to emit a beep  
*Off* will disable beep function. To enable beep, *press* the *Off* text and it will switch to *on*. Do the reverse to disable beep
- H/K Screen Saver** This is a timer to turn off the screen when no keys are pressed within the specified time. The timer is set by default to *00 mins* so screen will never turn off.
- I/L Radio Region** This sets the frequency stepping for the AM and FM bands. This should be set to *Oceania* for correct NZ radio operation
- J Rear Camera image reverse** This will reverse the image for the rear camera input. Most aftermarket reversing cameras will already be mirrored correctly so the function should be set to *off*

## Steering Wheel Control Detailed setup

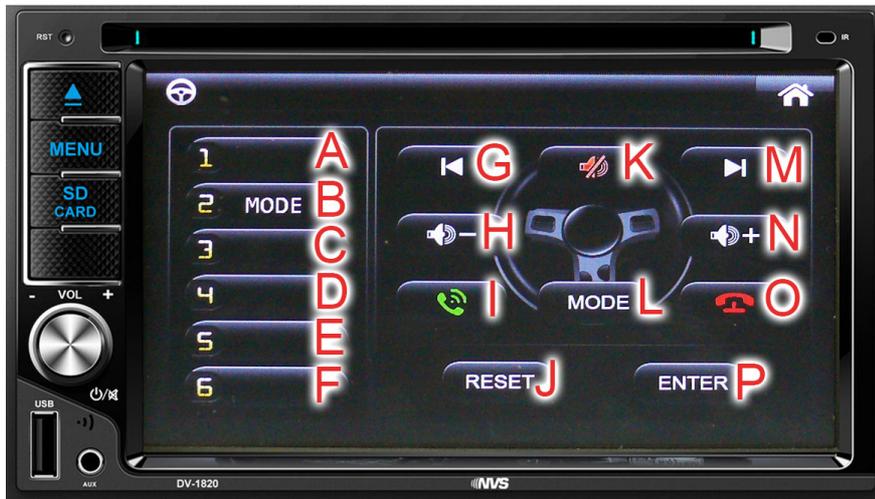

This unit has the ability to learn commands from the steering wheel controls if your vehicle is fitted with them. You can then assign different commands as pictured on the right side of the screen with up to 6 buttons on the left

### A to F Memory Locations 1 to 6

G	PREV	Previous track or Tune down a step on radio
H	VOL-	Decrease volume
I	Not used on this model	
J	RESET	Used to erase a memory
K	MUTE	Mute the radio
L	MODE	Changes source
M	NEXT	Next track or Tune up a step on radio
N	VOL+	Increase volume
O	Not used on this model	
P	ENTER	Confirms learned function

To enter the programming mode, *Press* the Steering wheel icon from the second screen on the system menu. Enter pin number (default 0000) then *press* enter

Make sure all connections are wired in correctly into rear of the wiring loom

**Clear any existing memories.** For example in the above picture to clear memory 2, *press* memory 2 and then the *RESET* button. Memory 2 button will now be blank

### To programme any steering wheel button

*Press* a blank memory location on the left side of the screen 1 to 6

*Press* the button on the steering wheel you want to learn, the memory location will then turn orange (*If it does not turn orange, then check wiring as it is not recognised*)

*Press* the desired command from the right side of the screen

*Press* Enter (A red arrow will prompt you to do this)

Repeat the process to add more buttons

*Press* MEN button to exit

### Not working?

If the steering wheel programming is not working as expected, try to exit out of the menu and re-enter programming mode, this will reset learning mode (but will retain already learned commands)

If the unit can't sense the steering wheel inputs, but are correctly wired, it may be incompatible with your vehicle.

## AM/FM Radio Operation



- A Tune Down** *Press to tune down 1 step in frequency  
Press and hold to automatically tune down to the next station*
- B Tuning Scale** *Press anywhere on the scale to directly go to frequency  
Press and slide on the scale to directly go to any frequency*
- C Tune up** *Press to tune up 1 step in frequency  
Press and hold to automatically tune up to the next station*
- D Tune up/dwn Presets** *Turn to tune up or down 1 step in frequency  
Press briefly buttons 1 to 6 to access stored radio stations  
Press and hold to store the currently displayed frequency*
- E AMS** *Automatic Memory Scan. In tuner mode, press and the strongest signal memories will be automatically stored in the preset memories*
- F Band** *Press to turn on AM/FM tuner. Press again to change band from AM/FM etc*
- G ST/MO** *Press to select ST (Stereo) or MO (Mono) MO is mainly used if reception is in a fringe area causing unit to flicker in and out of ST/MO*
- H LOC/DX** *Press to select Local or Distant radio reception. Unit is set default to Distant station. Use Local setting if in close proximity to a radio transmitter which swamps the receiver*
- I AUDIO** *Press to change preset eq sound settings Pop/Classic/Jazz/Flat/Rock*
- J RDS** *Not on this model*